

Snow Cone Machine

To Operate Machine

1. Start the motor and fill the gooseneck with ice cubes or block ice broken into pieces 3” to 4” in size. Fill to about an inch or so from the top, the larger the piece of ice the better the snow.
2. Push the pusher handle down to press the ice against the cutterhead. A firm even pressure is all that is required, but sometimes you will find it better to relieve to pressure two or three times on the way down. This lets the ice rearrange itself and you get a better bite.
3. DO NOT FORCE THE HANDLE too much as motor could be stalled.
4. When too much pressure is necessary, relieve the handle, and then come down again. Too much pressure on the pusher handle will make the ice come out coarse; too little pressure makes the ice too slushy.

In normal operations, the motor gets warm – a surface temperature of 150 degrees is normal.

CAUTION

Do no let any metal get down in the gooseneck, or you will ruin the blades.

Never put your fingers or any object into the shaver body while the motor is running. Disregard for these instructions and careless handling will result in accidents and/or injury. If problems not covered occur, contact your professional party rental center immediately.

These guidelines and tips are common-sense suggestions designed to promote snow cone machine efficiency and safety. Compiled from literature of leading experts in the field, they are believed to be reliable, and are offered as suggestions and illustrations to deal principally with common practices and conditions encountered in the use of snow cone machines. The guidelines are not intended to be all-inclusive, complete descriptions of safe practices, or to supplant or replace other additional precautionary measures to cover usual or unusual conditions or situations where common sense might otherwise dictate. Accordingly, Christina's Party Rentals disclaims all liability for, and makes no warranty or guarantee of, the accuracy or applicability of this information in any situation.

CHRISTINA'S PARTY RENTALS
9740 EAST EVERGREEN STREET
MIAMI, FL 33157
TEL: 305-969-1025 – FAX: 305-969-1622
www.christinaspartyrentals.net