



Cotton Candy Machine

Please review these instructions before operating the equipment.

BEFORE YOU BEGIN Machine • Bowl • Spinner head / operating components

1 SETUP

- Place the machine on a stable, level surface in a dry location.
- Confirm the bowl and operating components are properly positioned before plugging in the machine.

2 USE

- Use only sugar products intended for commercial cotton candy machines.
- Keep hands, utensils, loose clothing and other objects away from moving or heated components.
- Never leave the machine unattended while it is operating.

3 AFTER USE & RETURN

- Turn the machine off and unplug it before handling or cleaning.
- Allow all components to cool completely.
- Remove excess sugar and loose debris before return.
- Never immerse the machine, electrical base or electrical components in water.

HAVING A PROBLEM? CALL US RIGHT AWAY: 305-969-1025

Stop using the machine and contact Christina's Party Rentals as soon as an issue is discovered.

We can assist by phone or, when appropriate and available, dispatch a technician to your event.

Service calls are subject to availability, location and timing. If a technician is dispatched and the equipment is found to be operating properly and the issue is determined to be user error, additional service fees may apply.