



Popcorn Machine

Please review these instructions before operating the equipment.

BEFORE YOU BEGIN Machine • Kettle • Internal operating components

1 SETUP

- Place the machine on a stable, level surface.
- Make sure the kettle and internal components are properly positioned before use.

2 USE

- Preheat the kettle as directed.
- Use only appropriate popcorn, oil and seasoning products.
- Use caution around the kettle and heated surfaces.
- Never leave the machine unattended while heating.

3 AFTER USE & RETURN

- Turn off and unplug the machine.
- Allow the kettle to cool completely.
- Remove popcorn and loose debris.
- Never immerse electrical components in water.

HAVING A PROBLEM? CALL US RIGHT AWAY: 305-969-1025

Stop using the machine and contact Christina's Party Rentals as soon as an issue is discovered.

We can assist by phone or, when appropriate and available, dispatch a technician to your event.

Service calls are subject to availability, location and timing. If a technician is dispatched and the equipment is found to be operating properly and the issue is determined to be user error, additional service fees may apply.