



Freezer

Please review these instructions before operating the equipment.

IMPORTANT — TURN ON AT LEAST 24 HOURS BEFORE USE

The freezer must be plugged in and turned on at least 24 hours before use.

BEFORE YOU BEGIN Freezer • Grounded outlet • Temperature display / controls

1 SETUP

1. Place the freezer on a stable, level surface.
2. Turn the ON/OFF switch to ON.
3. Confirm that the interior temperature appears on the display.
4. Use the temperature controls only as necessary.

BEFORE LOADING FROZEN PRODUCTS

Allow sufficient time for the freezer to reach the required temperature before loading.

2 AFTER USE & RETURN

- Remove all food and products.
- Follow the pickup instructions provided with your order.

HAVING A PROBLEM? CALL US RIGHT AWAY: 305-969-1025

Stop using the equipment and contact Christina's Party Rentals as soon as an issue is discovered. We can assist by phone or, when appropriate and available, dispatch a technician to your event.

Service calls are subject to availability, location and timing. If a technician is dispatched and the equipment is found to be operating properly and the issue is determined to be user error, additional service fees may apply.