



Hot Dog Steamer

Please review these instructions before operating the equipment.

BEFORE YOU BEGIN Steamer • Water reservoir • Food compartments

1 SETUP

- Place the steamer on a stable, level, heat-resistant surface.
- Add the required amount of water before turning the unit on.

2 USE

- Never operate the steamer without water.
- Allow the unit to preheat before adding food.
- Use caution when opening the unit; hot steam can cause burns.

3 AFTER USE & RETURN

- Turn off and unplug the steamer.
- Allow the unit and water to cool completely before draining.
- Remove all food and debris before return.

HAVING A PROBLEM? CALL US RIGHT AWAY: 305-969-1025

Stop using the machine and contact Christina's Party Rentals as soon as an issue is discovered.

We can assist by phone or, when appropriate and available, dispatch a technician to your event.

Service calls are subject to availability, location and timing. If a technician is dispatched and the equipment is found to be operating properly and the issue is determined to be user error, additional service fees may apply.