



Oscillating Misting Fan

Please review these instructions before operating the equipment.

BEFORE YOU BEGIN Fan • Water tank • Stable surface • Grounded outlet

1 SETUP

- Place the misting fan upright on a stable, level surface. Lock the casters before operating.
- Position the fan in an open, well-ventilated area and keep the front and rear air openings clear.
- Plug the unit directly into a properly grounded outlet. Keep the plug, cord and electrical connections dry.

2 FILL WATER TANK

- Fill the water tank with clean water before using the misting function. Customer is responsible for filling the tank.
- Do not overfill the tank. Wipe up any spilled water before plugging in or operating the fan.

3 USE

- Turn the fan on and select the desired fan speed. Use the oscillation control if side-to-side airflow is desired.
- Turn on the misting / pump function only when water is in the tank. Never run the water pump with an empty tank.
- For best results, use outdoors or in a well-ventilated area. Keep mist away from outlets and electrical equipment.

4 AFTER USE & RETURN

- Turn off the misting function and fan, then unplug the unit before moving or handling it.
- Drain remaining water before transport or return. Do not move or roll the unit with a full tank.
- Do not hose down or immerse electrical components. Rental price does not include setup.

HAVING A PROBLEM? CALL US RIGHT AWAY: 305-969-1025

Stop using the equipment and contact Christina's Party Rentals as soon as an issue is discovered. We can assist by phone or, when appropriate and available, dispatch a technician to your event.

Service calls are subject to availability, location and timing. If a technician is dispatched and the equipment is found to be operating properly and the issue is determined to be user error, additional service fees may apply.