



Electric Hot Box

Please review these instructions before operating the equipment.

BEFORE YOU BEGIN Hot box • Grounded outlet • Sheet pans / accessories

1 SETUP & USE

1. Plug the unit into a properly grounded outlet.
2. Press the red power button.
3. Set the desired temperature using the digital temperature control.
4. Allow the unit to reach temperature before loading food.

OPERATING TEMPERATURE RANGE

Approximately 140°F–220°F, depending on the unit.

2 AFTER USE & RETURN

- Turn the hot box off and unplug it.
- Remove all food and debris.
- Return all sheet pans and accessories with the unit.

HAVING A PROBLEM? CALL US RIGHT AWAY: 305-969-1025

Stop using the equipment and contact Christina's Party Rentals as soon as an issue is discovered.

We can assist by phone or, when appropriate and available, dispatch a technician to your event.

Service calls are subject to availability, location and timing. If a technician is dispatched and the equipment is found to be operating properly and the issue is determined to be user error, additional service fees may apply.