



Refrigerator

Please review these instructions before operating the equipment.

IMPORTANT - TURN ON AT LEAST 24 HOURS BEFORE USE

The refrigerator must be plugged in and turned on at least 24 hours before use.

BEFORE YOU BEGIN Refrigerator • Grounded outlet • Temperature display / controls

1 SETUP

1. Place the unit on a stable, level surface.
2. Turn the ON/OFF switch to ON.
3. Confirm that the interior temperature appears on the display.
4. Use the SET and arrow controls to adjust the temperature if necessary.

2 AFTER USE & RETURN

- Remove all food, beverages and debris.
- Follow the pickup instructions provided with your order.

HAVING A PROBLEM? CALL US RIGHT AWAY: 305-969-1025

Stop using the equipment and contact Christina's Party Rentals as soon as an issue is discovered.

We can assist by phone or, when appropriate and available, dispatch a technician to your event.

Service calls are subject to availability, location and timing. If a technician is dispatched and the equipment is found to be operating properly and the issue is determined to be user error, additional service fees may apply.