



Snow Cone Machine

Please review these instructions before operating the equipment.

BEFORE YOU BEGIN Machine • Ice compartment • Blade / moving components

1 SETUP

- Place the machine on a sturdy, level surface.
- Make sure the ice compartment is clear before use.

2 USE

- Use clean ice appropriate for the machine.
- Keep hands, utensils and other objects away from blades and moving components.

3 AFTER USE & RETURN

- Turn off and unplug the machine before cleaning or removing ice.
- Remove or allow remaining ice to melt.
- Empty and dry the machine before return.

HAVING A PROBLEM? CALL US RIGHT AWAY: 305-969-1025

Stop using the machine and contact Christina's Party Rentals as soon as an issue is discovered.

We can assist by phone or, when appropriate and available, dispatch a technician to your event.

Service calls are subject to availability, location and timing. If a technician is dispatched and the equipment is found to be operating properly and the issue is determined to be user error, additional service fees may apply.